


# Embroidery Placement Chart

## ABOVE THE POCKET:

Customer preference.  
Always align with the top edge of the pocket. 🖱️

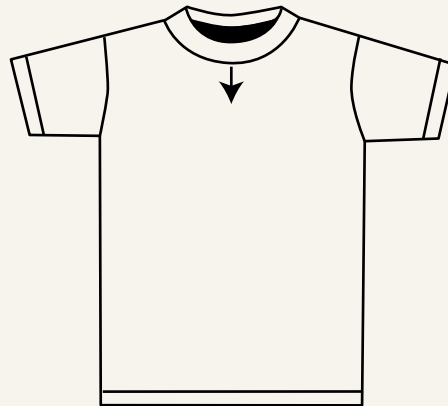



## 🖱️ CENTER CHEST:

6" to 4" from the bottom edge of the ribbing to the top of the design.

## CENTER OF DESIGN DOWN FROM THE SHOULDER:

Women - 7"-8". Men - 8'-9'. 🖱️

Over 4"-5" from the center of the placket. 🖱️

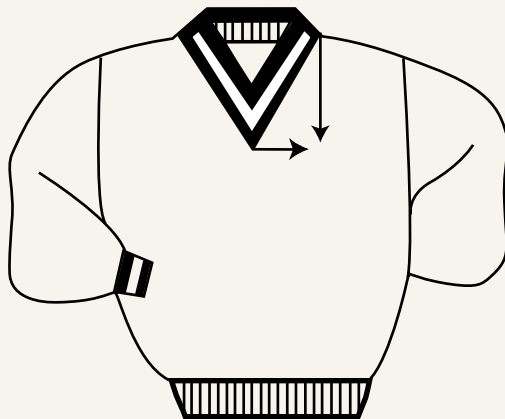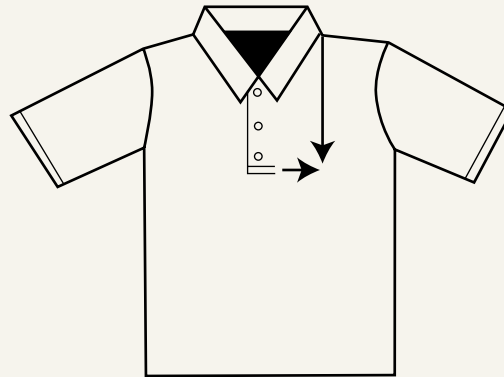

## 🖱️ BOXERS:

Find the center of the front by matching the seams. Then match the center front with the side seams to find the spot.

